


MCE

DIGITAL PROPORTIONAL R/C SYSTEM

2.4GHz FHSS

USER MANUAL

6 Channel Transmitter

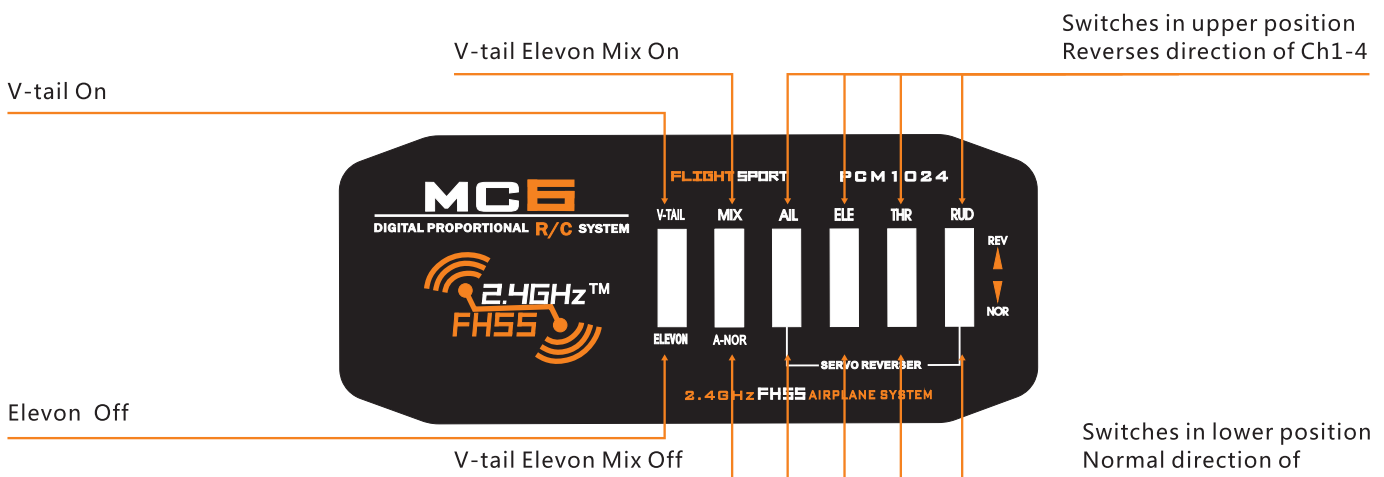

This 2.4GHZ features a unique coding protocol, to use this Transmitter with a receiver it must be bound to the receiver. The factory will bind the transmitter to the receiver but should it become unbound or should you purchase a second receiver then please follow the procedure outlined below.

1. Connect a bind plug to the receiver.
2. Switch on the power to the receiver, the green receiver LED will now flash.
3. Now pick up the transmitter, before you switch it on please ensure that the throttle is in the lowest position and that all the trims are in the middle position.
4. Holding the bind switch in the up position now switch on the transmitter.
5. The transmitter green LED will start flashing and the receiver LED will have gone off.
6. Release the bind switch on the transmitter.
7. Remove the bind plug on the receiver, the Green LED will now illuminate on the receiver and will now be bound to the transmitter.
8. Finally confirm that you have now have full control over all surfaces and controls.

PLEASE NOTE IT WILL DEPEND ON YOUR MODEL IF YOU HAVE A 4 OR 6 CHANNEL RADIO TRANSMITTER.